

foxydry®

vivo full steam

ACTIVE IRONING BOARD WITH INTEGRATED
STEAM BOILER AND PROFESSIONAL IRON



INSTRUCTION MANUAL

Before using this appliance, please read this instruction manual and keep it for future reference.

Dear Customer,

We are delighted that you have purchased the Euroflex Smooth Active Ironing Board. Through proper assembly, use and maintenance the board will provide excellent ironing results for a long time. Before using this ironing system for the first time, please read carefully through the instructions in this manual and store them for future reference. These instructions are to accompany the appliance when it is used by another person who is unfamiliar with its operation or when ownership is transferred to another person. The manufacturer, importer and the distributor assume no liability in the event that the information in these instructions has not been strictly followed.

SAFETY WARNINGS


- If the electrical cord is damaged, it must be replaced with a special cord or assembly, available from the manufacturer or its technical assistance service.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children must not play with the appliance.
- Cleaning and user maintenance must not be carried out by children without supervision.
- This appliance must not be left unattended while it is connected to the power supply.
- The plug must be removed from the socket-outlet before the water reservoir is filled with water.

- The steam boiler must not be opened during use.
- The iron must be rested and used on a stable surface.
- When placing your iron on its stand, ensure that the surface on which the stand is placed is stable.
- This appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- Keep the appliance and its cord out of reach of children when it is in operation or cooling down.

IMPORTANT NOTICES

- **WARNING!** If neither of the suction or blowing function is active, use the iron in dry-ironing mode (without steam) to avoid condensation inside the board.
- This appliance complies with European Directives regarding “electromagnetic compatibility” and “Electrical product safety”. The appliance carries CE marking.
- Repairs should be carried out solely by personnel authorized by the manufacturer. Repairs made by unauthorized personnel represent a risk and are not covered by the warranty.
- The manufacturer reserves the right to make changes to the design and features of the appliance without notice.
- This appliance is solely for household domestic use.
- Do not connect the appliance before making sure that electrical voltage supply corresponds to the required voltage shown on the product.
- The electric socket should be earthed and equipped with a 16A automatic circuit breaker.
- Do not connect the appliance to the electricity power supply with an unsuitable multi socket or an unsuitable extension lead. These do not guarantee the required safety of the appliance (e.g. danger of over heating).
- Prior to using the appliance, make sure the iron is securely connected to the ironing board steam valve. Failure to secure the connection could potentially lead to steam escaping, and the risk of scalding.
- The manufacturer, importer or distributor assume no responsibility for damage to property or injury to persons, in the event that this appliance is damaged as

result of improper use or assembly; unauthorized repairs carried out or unauthorized spare parts have been used; and for not properly following the care and maintenance instructions found in this manual.

- Do not expose the appliance to water, dampness or heat. Only indoor use, not intended for outdoor use.
- Use a dry or slightly damp cloth to clean this appliance.
- Use solely manufacturer-recommended accessories or spare parts.
- The steam released from the appliance is extremely hot. Both appliance and accessory tools may scald. Avoid direct contact. The steam symbol  (symbol 5597 relative to IEC 60417-1) warns operators that there is the risk of scalding!
- Do not iron without the ironing board cover. The ironing board reaches potentially high temperatures, do not touch under any circumstances. High temperatures may potentially scald.
- Keep the appliance in a safe dry place (not outdoors) and out of the reach of children when not in use.
- Do not pull on the electrical cable. Do not use the cable to move the appliance. Do not exert undue pressure on the cable (i.e. when closing a door). Avoid any contact with sharp edges and corners. Keep the cable away from hot surfaces.
- No parts which are to an electrical power supply (switch, plug, electronic components, etc) should come in contact with water.
- Disconnect the appliance from the power supply prior to any maintenance or cleaning operations. Always allow the appliance to completely cool down.
- Remove the power supply in the event the machine remains unattended for a period of time.
- Loosen the security cap only when the steam in the boiler has been released by holding down the steam supply button (10), and the machine has been turned off and cooled.
- Boiler filling should only be carried out with water that is free of additives, perfumes, or any other chemical substances.
- Do not overturn or lean the appliance unduly to one side.
- Do not point the jet of steam in the direction of persons, animals or plants.
- Do not point the jet of steam in the direction of electrical or household appliances.
- Do not insert any object in the various openings and do not use the appliance if any opening is obstructed.
- Do not use the appliance with wet hands or bare feet.
- Do not use the appliance when close to flammable or explosive substances.

ADVICE ON DISPOSAL

1. When this crossed-out bin symbol appears on a product it means that the product is covered by European Directive 2002/96/EC
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via specific collection facilities designated by the government or the local authorities.
3. Proper disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your municipality, the waste disposal service or the shop where you purchased the product.



INDICATIONS OF USE

This manual can not take into account every possible use. For further information or for any problems that are not covered in detail in this manual, please contact the Service Center or retailer. **Keep this manual in a safe place for future reference .**

Destroy all plastic bags and packaging material, they can be a risk for children!

NOTE: Keep the packaging for possible future transport (eg relocations, repairs, etc.)

Attention: the photographs and/or drawings in this document are for illustrative purposes only. Actual appliance and the accessories may vary due to product enhancement.

Safety Information in Digital Format: www.emmepi.tv/warning

Cometa Srl
Via G. Schiratti, 49
31053 Pieve di Soligo, TV
P.iva: 03845300262
+39 0438 971412
info@foxydry.com